


Hand Held Delrin Trigger Spray with SP325 Fixed Spray

Installation and Maintenance Instructions

FWS729D

FWS730D

FWS830D

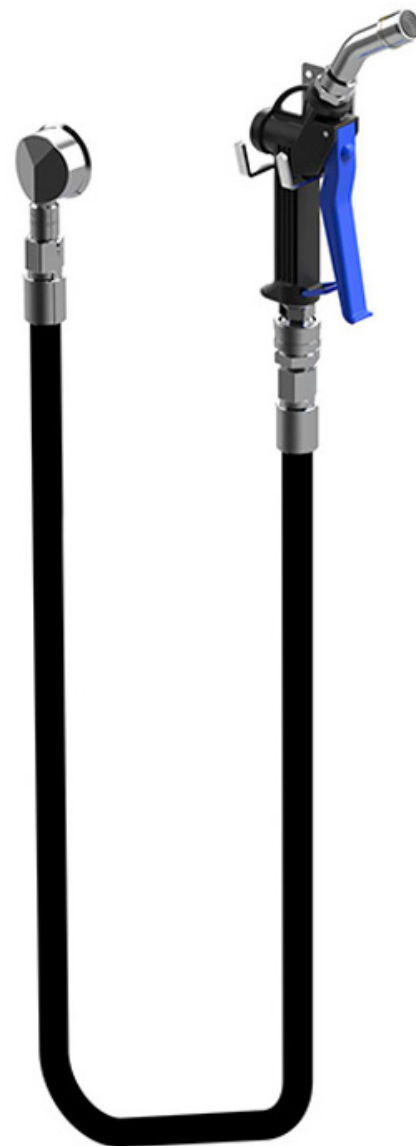

I00244_Version 1.1__FEB 23

technical data

Inlet Connection	1/2" BSP
Working Pressure Range	50 - 500 kPa
Maximum Working Temperature	50°C
Flow Rate	5 L/min or 7 L/min

Enware products are to be installed in accordance with the Plumbing Code of Australia (PCA) and AS/NZS3500. Installations not complying with PCA and AS/NZS 3500 may void the product and performance warranty provisions.

Reference should also be made to the Australasian Health Facility Guidelines (AHFG), ABCB and Local Government regulations when considering the choice of, and the installation of these products.


This product must be installed and commissioned by a qualified plumber.

For use with potable water only.


NOTE: Enware Australia advises:

1. Due to ongoing Research and Development, specifications may change without notice.
2. Component specifications may change on some export models.

dimensions

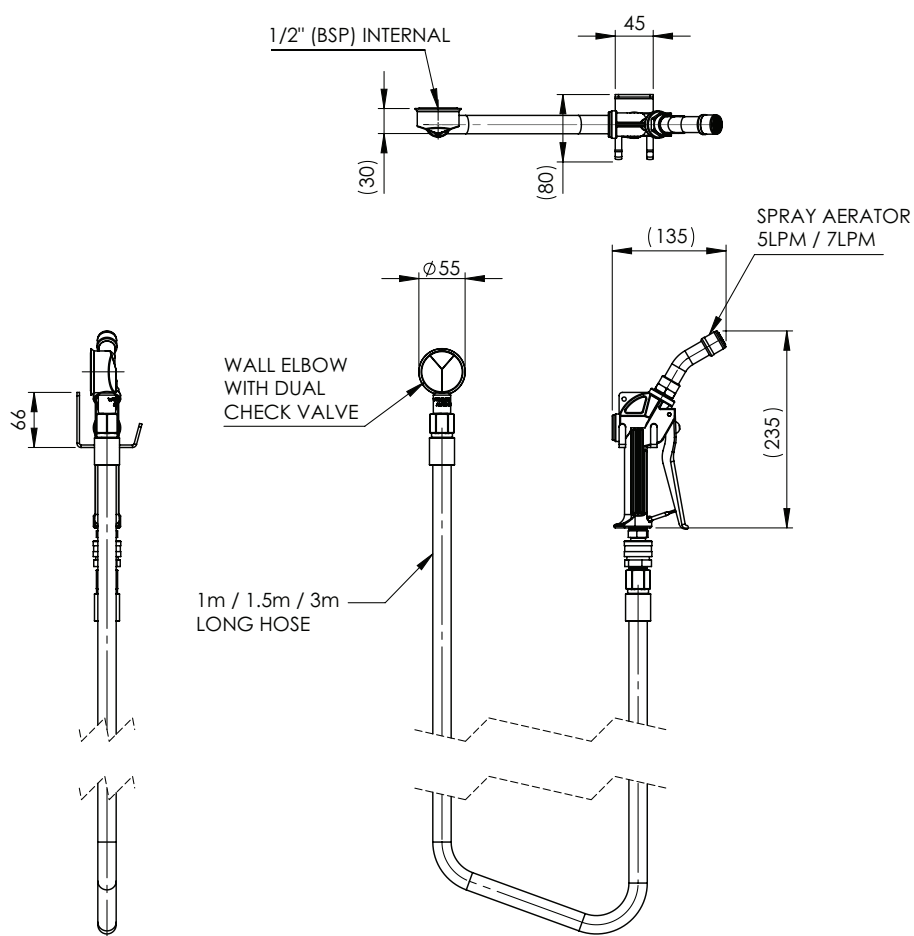

components & spare parts

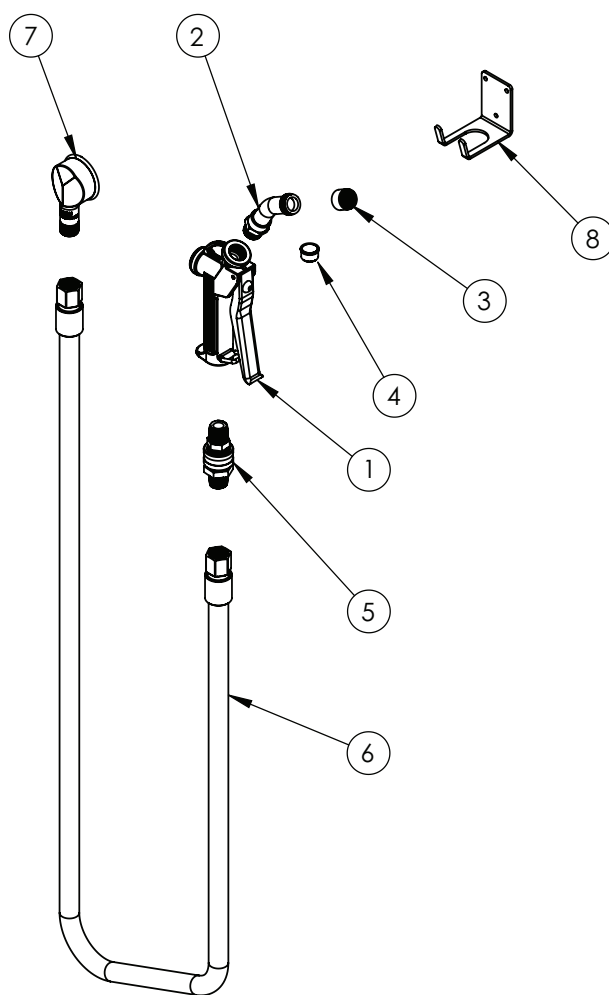


	Description	Spare Part Code
1	Delrin trigger gun	FS730
2	Outlet 60 deg male	881465
3	Spray aerator 5 L/min with housing	670016
4	Spray aerator insert 7 L/min	670367
5	Quick Connect hose connector	FS733
6	Hose - 1m	FS110E
	Hose - 1.5m	FS115E
	Hose - 3m	671784
7	Wall elbow with dual check valve	SP267
8	Wall bracket S/S	FS071

installation

IMPORTANT - Please Note:

- This product should always be installed with adjacent isolation valve.
- Maximum operating temperature is 50°C.

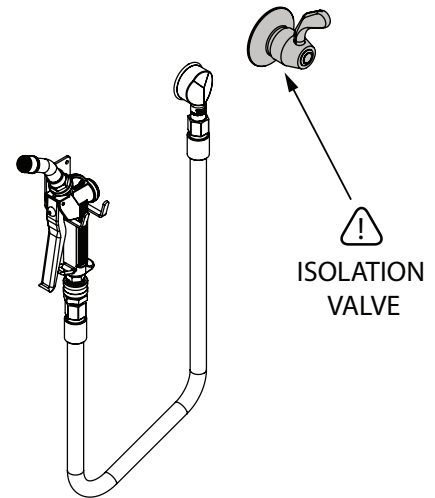

BEFORE INSTALLATION

- All supply lines must be flushed thoroughly to remove debris prior to the installation of this product.
- A thermostatic mixing valve and a pressure reduction valve may be required to comply with maximum temperature and pressure requirements.

INSTALLATION

1. Prepare 1/2" BSP male thread inlet point on wall. Allow for 15mm of thread protruding from finished wall.

SEE IMAGE 01

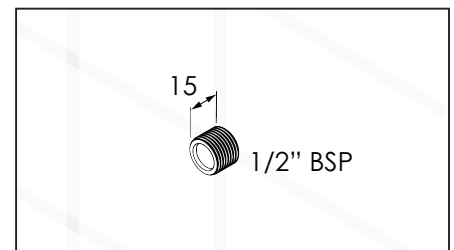


IMAGE 01

2. Apply thread sealant to the inlet thread and install wall elbow onto inlet thread so that the elbow faces downward.

SEE IMAGE 02

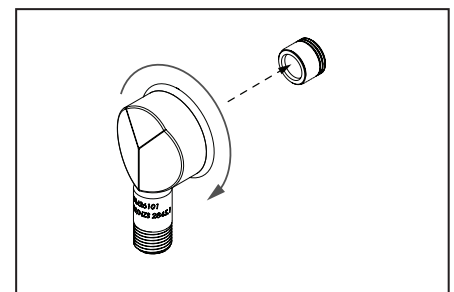


IMAGE 02

3. Connect hose and trigger spray to wall elbow. Use thread sealant to seal all threaded joints.

SEE IMAGE 03

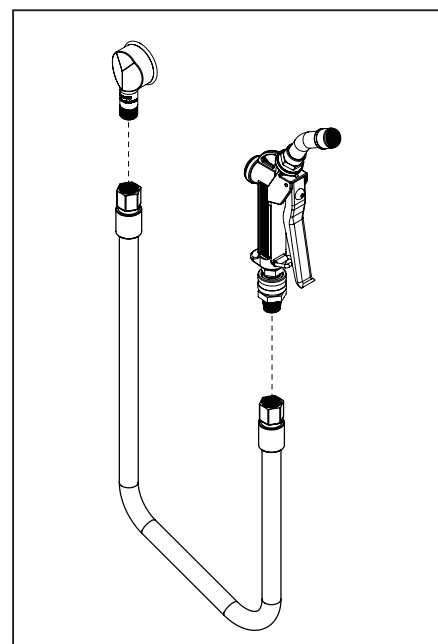


IMAGE 03

4. Install wall bracket. Mark drill holes in the desired position and use appropriate screws to fix the bracket onto wall. (Fixing screws not supplied.)

SEE IMAGE 04

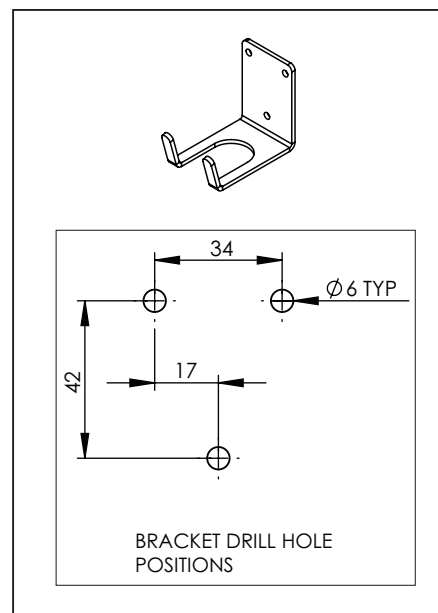


IMAGE 04

5. Trigger spray is factory fitted with a 5 L/min spray aerator. To change to 7 L/min spray aerator, unscrew the aerator housing and swap the aerator insert, then screw aerator housing back onto the trigger spray.

SEE IMAGE 05


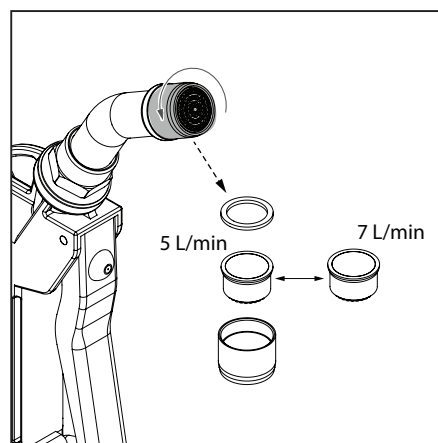


IMAGE 05

operation

Squeeze trigger to turn on water flow.

Release trigger to stop water flow.

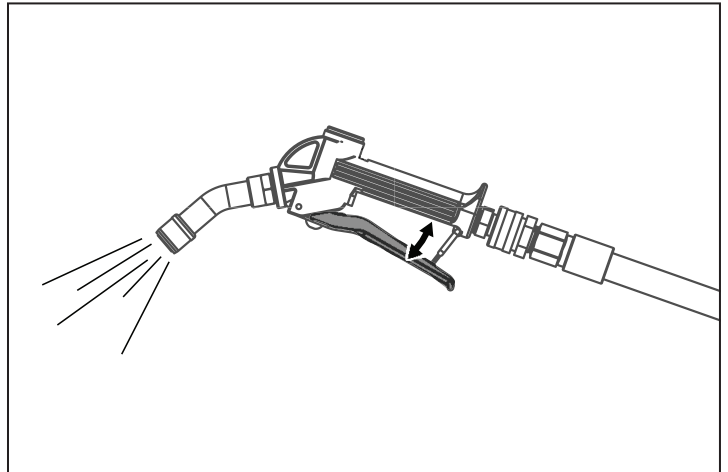



When not in use, hook the trigger onto wall bracket.

Turn off water supply to the trigger spray at the isolation valve.

Note:


When not in use, ensure valve to the trigger spray is turned off.

Valve should not be left on for prolonged periods of non-use as this maintains pressure to the hose and trigger spray assembly, which could result in water damage from flooding if in the unlikely event the hose or trigger spray were to malfunction.

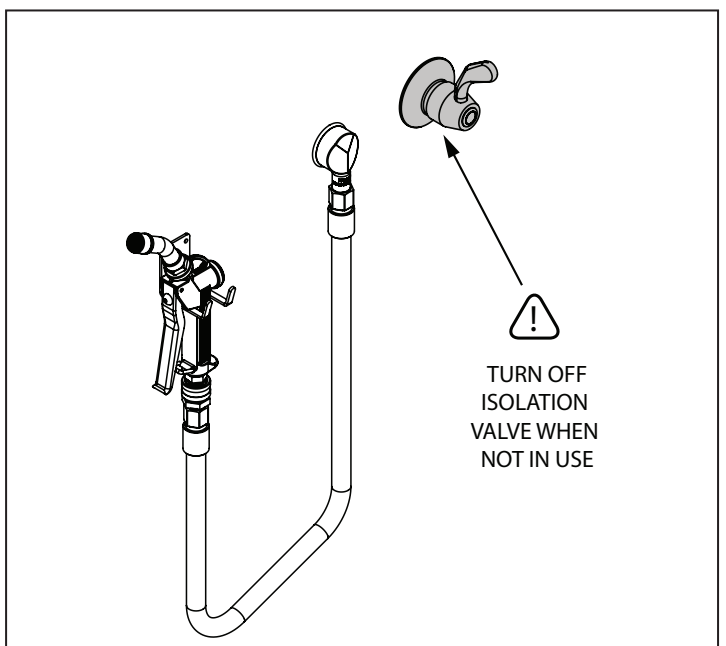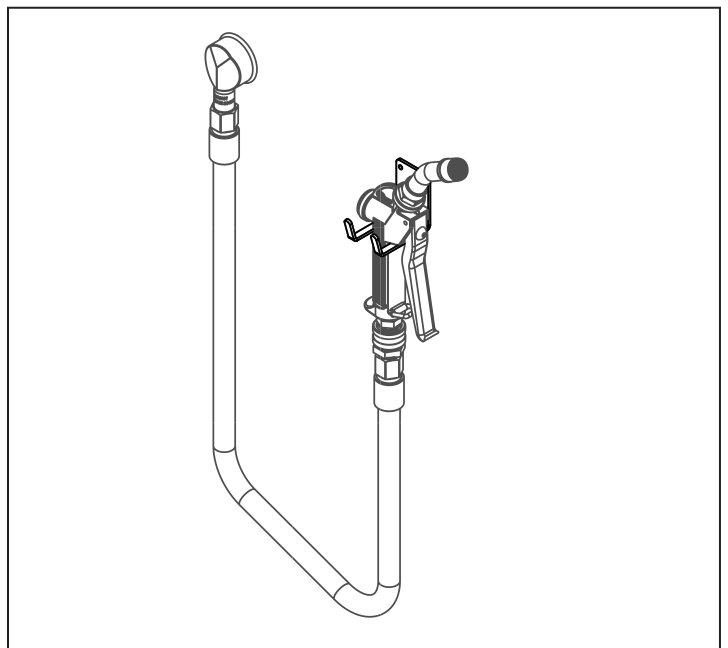

Trigger spray gun can be disconnected from hose using Quick Connect fitting.

To do this, turn off the water at isolation valve, squeeze spray gun trigger and release pressure inside hose. Slide the release on the Quick Connect fitting and pull the hose off the trigger gun.

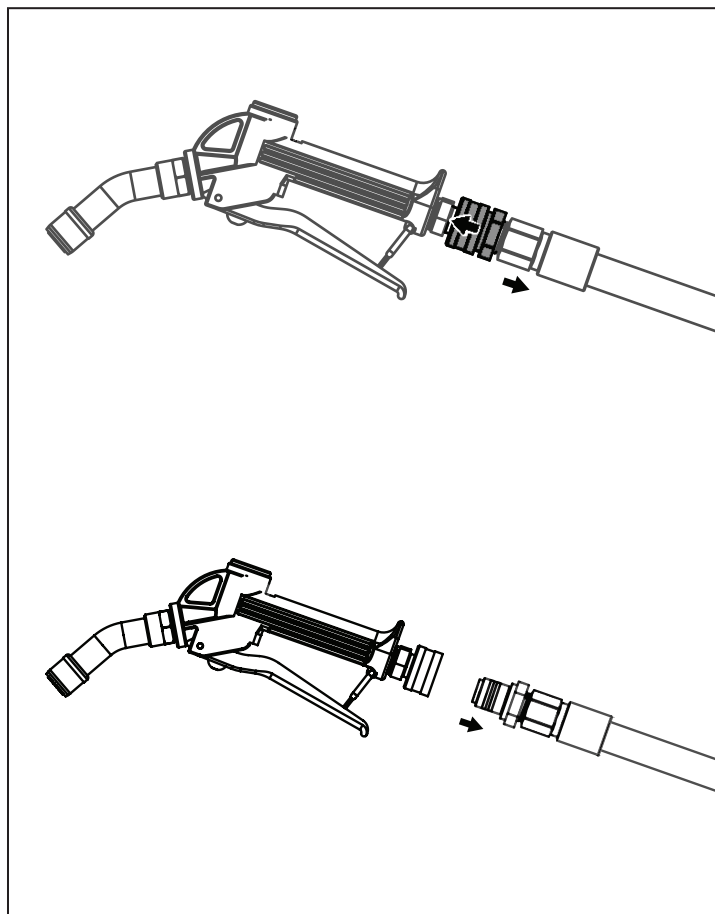

troubleshooting

PROBLEM	CAUSE	RECTIFICATION
Water leaking from outlet Water dripping and does not shut off	Trigger spray has debris caught in the mechanism.	Remove debris and/or replace trigger gun if damaged. Install an inline strainer.
	Tap seat is damaged	Replace trigger gun.
Water is leaking from trigger gun	Trigger gun is damaged	Replace trigger gun.
Water is not flowing from tap	Water turned off.	Turn water on.
Poor water flow from outlet	Spray aerator is blocked by debris.	Remove aerator from nozzle and clean debris. Replace aerator insert.
		Install an inline strainer.

Enware Australia (“we” or “us”) warrants that this product (also referred to as “our goods”) will be free from all defects in materials and workmanship for 2 years* from the date of purchase. Our liability under this warranty is limited at our option to the repair or replacement of the defective product or part, the cost of repair of the defective product or part or the supply of an equivalent product or part, in each case if we are satisfied the loss or damage was due to a defect in the materials or workmanship of the product or part. All products must be installed in accordance with the manufacturer’s instructions, the PCA, and AS/NZS3500 including any other applicable regulatory requirements.

making a claim

To make a claim under this warranty you must notify us in writing within 7 days of any alleged defect in the product coming to your attention and provide us with proof of your purchase of the product and completed the Online Product Service and Warranty Form available on website www.enware.com.au/warranty-service-form.

All notifications and accompanying forms must be sent to us marked for the attention of the Enware Australia, 9 Endeavour Road, Caringbah NSW 2229. We can also be contacted by telephone (1300 369 273) or by email (info@enware.com.au).

Your costs in making a claim under this warranty, including all freight, collection and delivery costs, are to be borne and paid by you. We also reserve the right at our cost to inspect any alleged defect in the product wherever it is located or installed or on our premises.

**Conditional warranty: 2 Year parts and labour on the complete assembly.*

exceptions

This warranty does not apply in respect of any damage or loss due to or arising from:

- a) Failure by you or any other person to follow any instructions for use (including instructions and directions relating to the handling, storage, installation, fitting, connection, adjustment or repair of the product) published or provided by us;
- b) Failure by you or any other person responsible for the fitting, installation or other work on the product to follow or conform to applicable laws, standards and codes (including the AS/NZ 3500 set of Standards, all applicable State and Territory Plumbing Codes, the Plumbing Code of Australia and directions and requirements of local and other statutory authorities); or
- c) Any act or circumstance beyond our control including faulty installation or connection, accident, abnormal use, acts of God, damage to buildings, other structures or infrastructure and loss or damage during product transit or transportation.

other conditions

Except as provided or referred to in this document, we accept no other or further liability for any damages or loss (including indirect, consequential or economic loss) and whether arising in contract, tort or otherwise. Any benefits available to you under this warranty are in addition to any non-excludable rights or remedies you may have under applicable legislation, including as a “consumer” under the Australian Consumer Law. To that extent you need to be aware that: Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.